

COTTON CANDY MACHINES

Add to your party atmosphere with a cotton candy machine!

- ✓ Plug in floss machine. Turn main power and Motor switch to "on."
- ✓ ALWAYS add sugar with the motor running.
- ✓ Fill 90% full whenever you add sugar.
- ✓ Reduce "heat control fine tuning" to eliminate smoking of machine
- ✓ Determine optimum setting for "heat range" & "heat control fine tuning."



Floss Making Procedure:

- 1) **Moisten** inside of floss pan with a damp cloth. Floss will adhere to pan.
- 2) Note direction of the floss as it is spun off the floss head.
- 3) **Adjust floaters** (on top of the spinner head).
up for more lift, **down** for less. Practice will give good control.
- 4) **Hold** cone an inch or two **at the pointed end** between two fingers and thumb.
- 5) **Break into the web of floss** with a light flicking motion.
Lift up the cone with the ring of floss attached.
Wind the floss onto the cone.
- 6) Brush cone with damp sponge so floss does not adhere to cone.
- 7) Roll floss on outside of pan **"ONLY."**
- 8) **Turn** ring of floss onto the cone in a **figure "8" pattern** to make a large web

Cleaning Tips:



- 1) Run all the sugar out of the floss head.
- 2) Turn heat on all the way for 1 minute when empty. This will remove carbon from ribbons.
- 3) Unplug main electrical supply cord first.
- 4) Wipe floss head with damp cloth.

-----Never allow water to enter the floss head.-----



Be sure all parts are dry before resuming operation or returning the machine.

UNDERSTAND YOUR RENTAL CONTRACT/KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

These guidelines and tips are common-sense suggestions designed to promote cotton candy machine efficiency and safety. Compiled from literature of leading experts in the field, they are believed to be reliable, and are offered as suggestions and illustrations to deal principally with common practices and conditions encountered in the use of these machines. The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplant or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate.

Accordingly,

The Sun Rental Center disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.