

Electric Roaster

Operating and Cleaning Instructions

DO NOT USE EXTENSION CORD !!!!!!!

1. COAT SURFACE WITH A NON-STICK SPRAY BEFORE USING. Place Cookwell into the Heatwell and cover. Always Use the cookwell for food. **Never place food or water directly in the heatwell.**
2. Preheating is recommended. Plug into 120v ac outlet. Set temperature control knob to desired temperature. **Preheat** for 20 minutes or until red light goes off.
3. Carefully using hot pads, add food to cookwell.
4. Always use rubber, plastic or wooden utensils on the non-stick interior surface. **Do not** use metal utensils.
5. **Only use soft brush or plastic scrubbing pads for cleaning. Never use metal based pads.**
6. For normal cleaning, immerse the removable pan in warm, Soapy water and use a sponge or dishcloth to clean surface