

HELIUM BALLOONS

For safe operation:

1. Transport cylinder in a well ventilated vehicle
2. Set cylinder on a **flat, level** surface
3. *Hand tighten* nozzle into tank-- **DO NOT USE WRENCH !!!!**
4. **OPEN** valve to fill balloons. This may be tight- follow arrows on valve to open/close valve.
5. Place balloon over rubber end of nozzle, bend in any direction to release helium into balloon.
6. **FILL** balloons to **round** (not pear) shape. Over-filling can cause balloons to break, and will cause a shortage of helium.
7. Allow only persons familiar with cylinder operation to use
8. Use the cylinder for filling balloons only
9. **DO NOT** breathe helium from balloons
10. Secure the “Open/Close” valve tightly after each use to prevent helium escape.
11. When finished, “close” tank. You **MUST** *release pressure* left in valve by bending rubber end. You then can **remove nozzle** from tank for safe return.

