

# POPCORN MACHINES

Sun Rental Center  
(440) 942 6106

Add to your party atmosphere with a popcorn machine!



## SWITCHES

Light and Warmer Switch - turns on heat lamp and optional strip heater under corn pan.

Kettle Motor Switch - turns on motor that drives kettle agitator shaft.

Kettle Heat Switch - turns on heat element inside kettle.

Note: **DO NOT COVER AIR VENT HOLES!**

**MOTOR AIR INTAKE AND EXHAUST HOLES AT TOP OF THE MACHINE MUST BE CLEAR OF ANY OBSTRUCTION.**

**AVOID SERIOUS BURNS! DO NOT TOUCH KETTLE WHILE IT IS HOT!**

## To Pop

1. Turn on (1) kettle heat switch (2) kettle motor (3) exhaust switch.
2. "Test pop" a kettle of corn

**6 oz corn  
2 oz oil  
1 T Flavacol**

Place oil measure in kettle with three corn kernels; when kernels pop, place remainder of oil, measured corn and flavoring in kettle; return kettle to upright position.

When corn has popped, rotate the handle to empty popcorn from kettle, return kettle to Upright position.

4. Repeat the cycle; subsequent batches are always more flavorful than the initial batch.
5. Turn off the kettle heat switch on the final batch when the popcorn breaks over the lid of the kettle to eliminate smoke and odor.
6. Turn off kettle heat and kettle motor and exhaust switches.
7. Wipe exterior of kettle with heavy cloth after cooling of kettle to prevent burn or stain of drippings.

## To Clean

1. Allow kettle to cool until warm enough to handle.
2. Unplug kettle and remove from machine.
3. Wipe kettle, kettle lids, crossbar and exterior clean.

**DO NOT IMMERSE KETTLE IN WATER!**

4. Remove popped corns.
5. Remove the "old maid" pan; empty unpopped kernels and wipe clean.
6. Wipe interior of machine clean.
7. Return the machine clean to the rental center to avoid cleaning charges.

### **UNDERSTAND YOUR RENTAL CONTRACT/KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED**

These guidelines and tips are common-sense suggestions designed to promote popcorn machine efficiency and safety. Compiled from literature of leading experts in the field, they are believed to be reliable, and are offered as suggestions and illustrations to deal principally with common practices and conditions encountered in the use of popcorn machines. The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplant or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate.

Accordingly,

The Sun Rental Center disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.