



**Party Rentals & Sales**  
**Construction Equipment**  
**Homeowner Tools**  
**Public Storage**  
**440.942.6106**

**WWW.SUNRENTAL.COM**

## Instructions

# **ELECTRIC ROASTER**

### **Operating Instructions**

- Coat surface with a non-stick spray before using. Place cookwell into the heatwell and cover. Always use the cookwell for food. Never place food or water directly in the heatwell.
- Plug into 120v ac outlet.
- Set temperature control knob to desired temperature.
- Preheat for 20 minutes or until red light goes off.
- Carefully using hot pads, add food to cookwell.

### **Cleaning Instructions**

- For normal cleaning, immerse the removable pan in warm, Soapy water and use a sponge or dishcloth to clean surface.

### **Helpful Hints**

- Always use rubber, plastic or wooden utensils on the non-stick interior surface. Do not use metal utensils.
- Only use soft brush or plastic scrubbing pads for cleaning. Never use metal based pads.

**UNDERSTAND YOUR RENTAL CONTRACT / KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED**

The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplement or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Sun Rental Center Inc disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.

Copyright © 2010 Sun Rental Center Inc. - Party - Tools - Storage