



**Party Rentals & Sales**  
**Construction Equipment**  
**Homeowner Tools**  
**Public Storage**  
**440.942.6106**

**WWW.SUNRENTAL.COM**

## Instructions

# HELIUM TANK

## Operating Instructions

- Transport cylinder in a well ventilated vehicle.
- Set cylinder on a flat, level surface.
- Hand tighten nozzle into tank-- DO NOT USE WRENCH !!!!
- OPEN valve to fill balloons. This may be tight- follow arrows on valve to open/close valve.
- Place balloon over rubber end of nozzle, bend in any direction to release helium into balloon.
- FILL balloons to round (not pear) shape. Over-filling can cause balloons to break, and will cause a shortage of helium.
- Allow only persons familiar with cylinder operation to use.
- Use the cylinder for filling balloons only.
- DO NOT breathe helium from balloons.
- Secure the "Open/Close" valve tightly after each use to prevent helium escape.
- When finished, "close" tank. You MUST release pressure left in valve by bending rubber end.
- You then can remove nozzle from tank for safe return.

## Helpful Hints

- Balloons only last 6-8 hours. You don't want to fill them too early!

UNDERSTAND YOUR RENTAL CONTRACT / KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplement or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Sun Rental Center Inc disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.

Copyright © 2010 Sun Rental Center Inc. - Party - Tools - Storage