



**Party Rentals & Sales**  
**Construction Equipment**  
**Homeowner Tools**  
**Public Storage**  
**440.942.6106**

**WWW.SUNRENTAL.COM**

## Instructions

# CHOCOLATE FOUNTAIN

## Operating Instructions

- Make sure the unit is room temperature before you begin. Cold stainless steel will harden the warm chocolate.
- Plug in and push the control switch to "pre-heat". Allow the unit to pre-heat for 10 minutes on the 8/10 heat setting.
- In the mean time, pre melt the chocolate in the microwave until soft.
- Level the fountain with the level provided in the case.
- Put the soft, pre-melted chocolate into the basin stirring every few minutes. Make sure the chocolate is melted. Approximately 30 minutes.
- Adjust heat setting to 6/10 after the chocolate has melted.
- Turn the control switch "on" and the chocolate should begin to flow through the fountain.
- Check to make sure all the vents are clear.

## Cleaning Instructions

- Dump the chocolate into the garbage while its still melted.
- Use a rubber spatula to scrape the basin and tiers.
- Remove the tiers first, then the auger, then the cylinder. These pieces are dishwasher safe but need to be rinsed off first.
- Wipe out basin with warm, damp cloth.

## Helpful Hints

### Mix and Max Pounds of Chocolate

<b>Fountain Size</b>	<b>Minimum</b>	<b>Maximum</b>	<b>Serves Approximately</b>
<b>Small</b>	6 lbs	6 lbs	40 people
<b>Medium</b>	6 lbs	12 lbs	75-100 people
<b>Large</b>	12 lbs	20 lbs	150 people

### Melting and Operating Temperatures

<b>Chocolate</b>	<b>Heat Setting to Melt Chocolate</b>	<b>Approx Melting Time</b>	<b>Heat Setting After Chocolate is Melted</b>
<b>Dark</b>	10	45 minutes	6
<b>Milk</b>	7	60 minutes	6
<b>White</b>	7	60 minutes	5

UNDERSTAND YOUR RENTAL CONTRACT / KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplement or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Sun Rental Center Inc disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.

Copyright © 2010 Sun Rental Center Inc. - Party - Tools - Storage



**Party Rentals & Sales**  
**Construction Equipment**  
**Homeowner Tools**  
**Public Storage**  
**440.942.6106**

**WWW.SUNRENTAL.COM**

## Instructions

# CHOCOLATE FOUNTAIN

### FAQ's

#### Q1. Is the fountain difficult to clean?

Not at all. Once your event has concluded, simply use a rubber spatula to remove the chocolate on the fountain cylinder and tiers. The chocolate can then be scooped or poured into a separate container. Paper towels or a damp cloth can then be used to wipe the fountain relatively clean. Once the majority of the chocolate is removed, you can place the individual parts (except the basin) of the fountain into a dishwasher to be cleaned (Caution! Never place the fountain basin in water! This will cause permanent damage to the electrical components.)

\*Note: Chocolate must be disposed of into a trash receptacle. Chocolate disposed of into sinks will harden and cause damage to the drainage pipes.

#### Q2. Can I use any chocolate in the Sefhra™ Fountains?

For complete satisfaction, we highly recommend the use of our Premium Fondue Chocolate, specially formulated and ready to use in the fountain by simply pre-melting the chocolate in a microwave on HALF-power as instructed on our chocolate bags. It requires no messy mixing of extra oil into the chocolate; saving you time, money and producing the perfect chocolate fondue every time.

#### Q3. How do I melt the chocolate?

The process of melting chocolate is called "tempering". Our Premium Fondue Chocolate can be "tempered" by the following method: (1) Place one bag of our Premium Fondue Chocolate in the microwave. Heat on half power for 3-5 minutes as instructed on the package. It is important to gently massage the chocolate bag every 2-3 minutes, so that the chocolate will not burn. When the chocolate is melted, simply cut the top corner of the bag off, and pour the chocolate into the fountain. You can also temper the chocolate by pouring the chips directly into the basin. Melting the chocolate using this process takes about 1 hour.

#### Q4. Can I use the Sefhra™ Fountains to melt the chocolate?

Yes. The Sefhra™ Fountain acts as a tempering machine to keep the chocolate at the correct temperature and consistency. To use the fountain to melt the chocolate, place the chocolate inside the basin, and turn the control knob to "Heat Only" and set the temperature to the highest setting. The chocolate should be stirred occasionally as it is melting. Using the fountain to melt the chocolate takes considerably longer (about one 1 hour).

#### Q5. How much chocolate do I put into the fountains?

Typically you can run the fountains with 15 pounds of chocolate, however each fountain holds approximately 20 pounds of melted chocolate (If there is not enough chocolate in the basin, gaps will appear as the chocolate flows over the tiers). The basin should be full to within 1/2" of the basin rim. As chocolate is consumed by guests, more melted chocolate may be added to the basin of the fountain. Be careful not to add too much additional chocolate. When the fountain is turned off the chocolate settles into the basin. If too much chocolate has been added it will overflow.

#### Q6. What foods can I dip in the chocolate?

This is up to your imagination! Typically fruits such as strawberries and bananas work well. Other popular items are pineapple, marshmallows, grapes, blueberries, mangos, papaya, apple slices, dried apricots, and pretzels, and of course maraschino cherries. Things that are not recommended are foods that produce crumbs, such as cakes, blackberries, raspberries, and some cookies. Fingers are not recommended either and can result in some very unhappy guests. We recommend providing an ample supply of skewers, plenty of napkins, and small plates for your guests to use.

- CONTINUED -

UNDERSTAND YOUR RENTAL CONTRACT / KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplement or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Sun Rental Center Inc disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.

Copyright © 2010 Sun Rental Center Inc. - Party - Tools - Storage



**Party Rentals & Sales**  
**Construction Equipment**  
**Homeowner Tools**  
**Public Storage**  
**440.942.6106**

**WWW.SUNRENTAL.COM**

## Instructions

# CHOCOLATE FOUNTAIN

### FAQ's

**Q7. What do I do if the chocolate has hardened in the fountain?**

Once the chocolate has hardened in the fountain and the auger within the fountain tower was not previously removed, **DO NOT** turn the fountain motor on! This will harm the motor and result in **PERMANENT DAMAGE!** Simply turn the fountain control knob to **HEAT ONLY**. This will gradually melt the remaining chocolate allowing you to clean the fountain as normal.

**Q8. Can I re-use the chocolate?**

We do not recommend re-using the chocolate due to health concerns and safety.

**Q9. Can I use the Sephra™ fountains outside?**

In certain instances the fountains will not function correctly outside. In order for the chocolate to flow smoothly over the tiers it must maintain a certain temperature. In areas where there are cool breezes or the temperature is somewhat cold, the fountain functionality may be affected. A good rule of thumb is this: "If the temperature is low enough for guests to wear jackets or coats, it's not a good idea to use the fountain outside." Another deterrent to outside fountain use may be the presence of chocolate craving insects - which dramatically decrease guest satisfaction! Wind and even slight breezes can also cause disasters when the chocolate fountain is run outside. Because of the thin, flowing curtain of chocolate, even a small breeze can cover more than just the strawberries in chocolate!

**Q10. If the fountain is not working, how do I fix it?**

Sephra Chocolate Fountains have set the industry standards for reliability and you should never encounter a problem. If for some reason your fountain is not working correctly, refer to the troubleshooting section of the Sephra™ Chocolate Fountain Operating Guide. If the problem cannot be resolved, please contact Sun Rental customer support staff immediately for additional trouble shooting assistance. We are dedicated to taking care of our customer's needs as quickly as possible. This is just one of the ways Sun Rental provides our customers with superior quality service.

UNDERSTAND YOUR RENTAL CONTRACT / KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplement or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Sun Rental Center Inc disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.

Copyright © 2010 Sun Rental Center Inc. - Party - Tools - Storage