



**Party Rentals & Sales**  
**Construction Equipment**  
**Homeowner Tools**  
**Public Storage**  
**440.942.6106**

**WWW.SUNRENTAL.COM**

## Instructions

# COTTON CANDY MACHINE

## Operating Instructions

- With main switch still OFF, fill floss head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a balanced condition in the floss head. **DO NOT OVER- FILL!** Excessive vibration will occur if over-filled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration.
- Turn MAIN SWITCH and HEAT SWITCH "ON".
- Turn heat control knob clockwise to maximum setting to initiate the fastest warm up.
- The machine should start making floss in about 45 seconds. When the unit starts making floss, you must reduce the heat setting. Turn the heat control knob counter clockwise to eliminate smoking.
- Once you find the ideal setting for the HEAT CONTROL, operate with the setting near this position every time.
- Pick a cone- if it sticks in the stack, twist it.
- Hold and inch or two of the pointed end of the cone between two fingers and thumb.
- Roll cone in the web of floss building up in the pan.
- Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss.
- **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly.
- If the floss fails to stick to the cone, pass the cone next to the spinner head to pick up some of the melted sugar.
- Lift the cone out of the pan and wrap the floss with a "figure 8" movement of the hand. 8.
- Make sure room humidity is not too high or product will be "heavy".
- When finished making floss, run the floss head completely empty of sugar.
- Turn the heat control dial to the maximum position and allow machine to run for 3 min. This will burn any excess sugar out of the head and prevent any excess carbon build up.
- Turn the heat switch "off" and allow motor to run 1 more minute to allow floss head to cool down.

## Cleaning Instructions

- Run all sugar out of floss head-as much as possible.
- Rinse bowl, screen and clips with hot water to clean off sugar.
- Rinse plastic bowl cover with hot water to clean off sugar.

## Helpful Hints

- Do not put hands or objects in rotating spinner head.
- Do not fill spinner head with sugar while it is rotating.
- Operator should wear eye protection.
- Only use the floss cone to collect cotton candy.

UNDERSTAND YOUR RENTAL CONTRACT / KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplement or replace other additional precautionary measure to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Sun Rental Center Inc disclaims all liability for, and makes no warranty or guarantee, the accuracy or applicability of this information in any situation.

Copyright © 2010 Sun Rental Center Inc. - Party - Tools - Storage